


Vanity Sink Installation Guide

EM

Undermount Sink Installation



- Verify cutout alignment by positioning the sink in the desired mounting location.
- Sink clips, either Z clips or L clips, will be provided by Electric Mirror when supplying the sink.
- Drill holes for anchors measuring 3/8" in diameter and 1/2" deep.
- Apply sealant to the closed end of the thread knurl.
- Insert the thread knurl with the threaded end exposed.
- Seal around the top side rim of the sink near the edge.
- Carefully lift the sink into place, align it, and press firmly.
- Remove excess sealant.
- Attach undermount clips to secure the sink.
- Allow the sealant to cure before installing the drain, faucet, and water supply according to the manufacturer's instructions.
- Avoid overtightening the drain to prevent damage.
- Inspect for leaks.

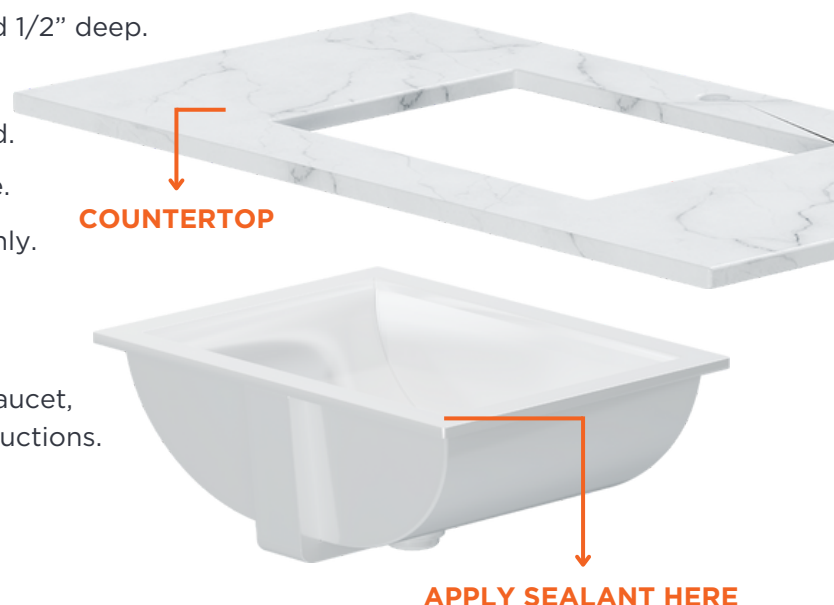

Vessel Sink Installation




- Verify cutout alignment by positioning the sink in the desired mounting location.
- Apply sealant to the bottom side of the sink drain [this is to keep the sink from turning or moving once the drain is installed] and press firmly. **WARNING: DO NOT DO THIS ON FROSTED GLASS AS THE FINISH MAYBE HARMED.**
- Align the drain hole with the countertop cutout and press firmly.
- Remove excess sealant.
- Allow the sealant to cure before installing the drain and water supply according to the manufacturer's instructions.
- Avoid overtightening the drain to prevent damage.
- Inspect for leaks.



Semi-Recessed Sink Installation



- Verify cutout alignment by positioning the sink in the desired mounting location.
- Apply sealant to the bottom side of the sink [this is to keep the sink from turning or moving once the drain is installed] and press firmly.
- Remove excess sealant.
- Allow the sealant to cure before installing the drain and water supply according to the manufacturer's instructions.
- Avoid overtightening the drain to prevent damage.
- Inspect for leaks.

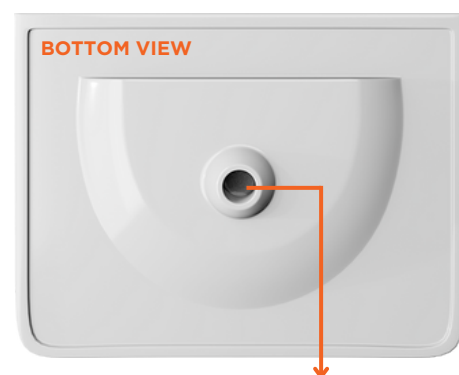

APPLY SEALANT HERE



COUNTERTOP